

Printing PIXMA PIXMA E470

PIXMA E470



Print		
Printing Resolution	4 800 (horizontal)*1 x 600 (vertical) dpi	
Print Head / Ink	Туре:	FINE Cartridge
	Number of Nozzles:	Total 1 280 nozzles
	Ink Cartridge:	PG-47, CL-57S
Print Speed*2 Based on ISO / IEC 24734. Click here for summary report Click here for Document Print and Copy Speed Measurement Conditions	Document: Colour: ESAT/Simplex	4.0 images per minute
	Document: B/W: ESAT/Simplex	8.0 images per minute
Printable Width	Bordered:	203.2mm (20.32cm)
	Borderless:	

Printable Area	Bordered Printing:	Top margin: 3mm, Bottom margin: 16.7mm, Left / Right margin: each 3.4mm (Letter / Legal: Left: 6.4mm, Right: 6.3mm)
Recommended Printing Area	Top Margin:	31.6mm
	Bottom Margin:	29.2mm
Paper Size	A4, A5, B5, Letter, Legal, 10.16cm x 15.24cm, 12.70cm x 17.78cm, Envelopes (DL, COM10), Square (12.70cm x 12.70cm), Custom size (width 101.6 - 215.9mm, length 127 - 676mm)	
Paper Handling Rear Tray (Number)	Plain Paper	A4, A5, B5, Letter = 60, Legal = 10
	Photo Paper Plus Glossy II (PP-201)	10.16 x 15.24cm = 20, Square (12.7 x 12.7cm) = 10, 12.7 x 17.78cm = 10
	Envelope	European DL / US Com. #10=5
	Glossy Photo Paper "Everyday Use" (GP- 508)	10.16 x 15.24cm = 20
	Canon Oce Red Label Paper (WOP111)	A4 = 60
	Canon Oce Office Colour Paper (SAT213)	A4 = 50
Paper Weight	Rear Tray	Plain Paper: 64-105g/m ² , Canon specialty paper: paper weight: 275g/m ² (Photo Paper Plus Glossy II (PP-201))
Ink End Sensor	Dot count	
Print Head Alignment	Manual	
Scan ^{*3}		
Scanner Type	Flatbed	
Scanning Method	CIS (Contact Image Sensor)	
Optical Resolution*4	600 x 1 200dpi	

Selectable Resolution*5	25 - 19 200dpi	
Scanning Bit Depth (Input / Output)	Grayscale:	16bit / 8bit
	Colour:	48bit / 24bit (RGB each 16bit / 8bit)
Line Scanning Speed*6	Grayscale:	1.2 ms/line (300dpi)
	Colour:	3.5 ms/line (300dpi)
Scanning Speed* ⁷	Reflective: A4 Colour / 300dpi	14s
Document Size	Flatbed	A4 / Letter (216 x 297mm)
Сору		
Document Size	A4 / Letter (216 x 297mm)	
Compatible Media	Size	A4, Letter
	Туре	Plain Paper
Image Quality	Plain Paper: Draft, Standard	
Copy Speed ^{*8}	Document: Colour: sFCOT / Simplex	28s
	Document: Colour: sESAT / Simplex	2.1 images per minute
Multiple Copy	Black / Colour:	1 - 21 pages
Network		
Protocol	TCP/IP	
Wireless LAN	Network Type:	IEEE802.11n/ IEEE802.11g/ IEEE802.11b
	Frequency Band:	2.4GHz
	Channel*29:	1-13
	Security:	WEP64 / 128bit, WPA- PSK (TKIP / AES), WPA2- PSK (TKIP / AES)
Direct connection (Wireless LAN)	Available (AP Mode only)	
System Requirements (Please	Windows:	Windows 10, Windows 8, Windows 7 SP1,

visit www.canon- asia.com to check OS compatibility and to download the latest driver updates.)		Windows Vista SP2
	Macintosh:	Mac OS X v10.8.5 and later
General		
Canon Print Service Plugin (for Android OS)	Available	
PIXMA Cloud Link	From smartphone or tablet:	Available
Canon PRINT Inkjet /	Available	
SELPHY (for iOS / for Android) Canon Easy-PhotoPrint (for Windows RT)	1-up (bordered only)	Letter, A4, 10.16 x 15.24 cm, 12.7 x 17.78 cm, 20.32 x 25.4 cm, Square 12.7 x 12.7 cm, A5, B5, Legal
	Print Quality	Fixed
Camera Direct Spec.	Compatible Digital Camera	"PictBridge" compliant digital cameras, camcorders and camera phones
	Connecting type	WLAN
	File Format	JPEG (Exif ver 2.2 / 2.21 / 2.3 compliant), PNG
	Layout *11	1-up (bordered only)
		Photo Index
		Print with shooting information
		File number & date print
	Print Quality *9*10*12*13	Fixed
Interface	Hi-Speed USB	
PictBridge	Wireless LAN	Available
Operating Environment ^{*14}	Temperature: 5 - 35°C ? Humidity: 10 - 90% RH (no dew condensation)	
Recommended Environment *15	Temperature: 15 -30°C ? Humidity: 10 - 80% RH (no dew condensation)	
Storage Environment	Temperature: 0 - 40°C ? Humidity: 5 - 95% RH (no dew	

	condensation)	
Quiet Mode	Available	
Acoustic Noise (PC Print)	Photo (10.16 x 15.24 cm)*16	46.5 dB
Power	AC 100 - 240V 50 / 60Hz	
Power Consumption	OFF	0.2W
	Standby (scanning lamp is off):	1.6W
	Standby (all ports connected, scanning lamp is off)	1.6W Wireless LAN connection to PC
	Copying*17 Printing*18 (Wireless LAN connection to PC)	10W
Environment	Regulation	RoHS (EU, China)*, WEEE (EU)* *To be fixed
	Eco-Label	Energy Star* *To be fixed
Dimension (W x D x H)	426 x 306 x 145mm	
Weight	3.5kg	

Specifications are subject to change without notice.

- *1 Ink droplets can be placed with a pitch of 0.000529167cm
- Document print speeds are the averages of ESAT in Office Category Test for the default simplex mode, ISO/IEC 24734. Photo print speed is based on the default setting using ISO/JIS-SCID N2 on Photo Paper Plus Glossy II and does not take into account data processing time on host computer. Print speed may vary depending on system configuration, interface, software, document complexity, print mode, page coverage, type of paper used etc.
- *3 TWAIN driver (ScanGear) is based on the TWAIN specification

- V1.9 and requires the Data Source Manager comes with the operating system.
- Optical resolution is a measure of hardware sampling resolution, based on ISO 14473 standard.
- *5 Increasing the scanning resolution will limit the possible scanning area.
- *6 The fastest speed in Hi-Speed USB on Windows PC. Transfer time to computer is not included.
- *7 Color document scan speed is measured with ISO / IEC 29183 Target A.
 - Scan speed indicates the time measured between pressing the scan button of the scanner driver and the on-screen status display turns off.
 - Scan speed may vary depending on system configuration, interface, software, scan mode settings and document size etc.
- Copy speeds are the average of sFCOT and sESAT, ISO / IEC 29183.
 Copy speed may vary depending on document complexity, copy mode, page coverage, type of paper used etc. and does not take into account warm-up time.
- *9 Resolution may be changed between Direct print and printing from PC.
- *10 Only 'standard' mode available in choosing disk label print.
- *11 Function depends on the connected digital cameras, camcorders or camera phones.
- *12 Only 'high' mode available as for the printer without LCD.
- *13 Only 'high' mode available in choosing sticker print.
- *14 The performance of the printer may be reduced under certain temperature and humidity conditions.
- *15 For the temperature and humidity conditions of papers such as photo paper, refer to the paper's packaging or the supplied instructions.
- *16 When printing ISO / JIS-SCID N2 on 10.16cm x 15.24 cm Photo Paper Plus Glossy II using default settings.
- *17 Copy: When copying ISO / JIS-SCID N2 (printed by inkjet printer) on A4 size plain paper using default settings.
- *18 Print: When printing ISO / JIS-SCID N2 (printed by inkjet printer) on A4 size plain paper using default settings.

Disclaimer

 You need to install ink tanks or ink cartridges of all colours whether you perform black and white printing or colour printing. If

- any one of the ink tanks or ink cartridges is not installed, an error occurs and you cannot perform printing.
- Depending on the paper or the print settings, colour ink may be consumed even when you print a document in black or perform printing in black and white. When any one of the colours of ink has run out, you need to replace the ink tank or ink cartridge.
- When you use the Canon printer for the first time after you install
 the bundled ink tanks, the printer consumes a small amount of ink
 in the amount to enable printing by filling the nozzles of the Print
 Head with ink. For this reason, the number of sheets that can be
 printed with the first ink tanks is fewer than the succeeding ink
 tanks.
- The printing costs described in the brochures or websites are based on the consumption data from not the first ink tank / ink cartridge but the succeeding ink tank / ink cartridge.
- To keep printer's performance, Canon printer performs cleaning automatically according to its condition. When the printer performs cleaning, a small amount of ink is consumed. In this case, all colours of ink may be consumed.

[Cleaning function]

The cleaning function helps the printer to suck air bubbles or ink itself from the nozzle and thus prevents print quality degradation or nozzle clogging.?

- The repairing parts for printers will be available five years after production is discontinued. Depending on your model, we may ask you to replace it with a new one, or one with almost the same performance as a maintenance service. In this case, it may be that you cannot use supplies or accessories for your model or the compatible OS will be changed.
- The warranty term for details, contact a Canon-authorized sales representative in the country or region you live in.
- To obtain good printing quality, use up ink within six months after opening.
- Regarding a solution to a problem caused by using non-genuine ink cartridges (including ones supplemented with non-genuine ink by making a hole in the cartridge or so), a fee will be charged even within the warranty term. Keep this in your mind when you use non-genuine ink.
- If you use non-genuine ink cartridges (including ones supplemented with non-genuine ink by making a hole in the cartridge or so), they may have a negative effect on the performance of the printer or the printing quality may be reduced. In addition, though it is a rare case and does not present a safety hazard, it is reported that a print head will become heated or smoke will be emitted from it due to an ingredient not contained in genuine Canon ink. (Note that this does not apply to all nongenuine ink.)
- The following functions are available only on printers that use genuine Canon ink for all colours and support these functions. For supported functions, see the product specifications section for

each model.

- Printing CREATIVE PARK PREMIUM content via My Image Garden, Easy-PhotoPrint+, or PIXMA Cloud Link
- Using the following applications via PIXMA Cloud Link
- Scan to E-mail
- Attach to Webmail
- Scan to Office document
- Scan and Remote Print
- Saving scanned images to Dropbox, Google Drive, OneDrive, Evernote, OneNote
- A printer with a fax function stores the following fax data in printer's memory:
 - Faxes not printed out due to conditions such as ink running out.
 - Faxes in the send queue.

If you disconnect the power cord, the date and time settings are reset and faxes stored in the printer's memory will be deleted. Before you disconnect the power cord, confirm that faxes you need to keep have already been printed or sent.

- Depending on your terminal, such as a computer or a smartphone, or the operating system of your terminal, such as your computer or smartphone, the information or the message related to the estimated remaining capacity of the maintenance cartridge usage displayed on the screen of your terminal may be different from the information or message displayed on the operation panel of the printer. Also, the message for the estimated remaining capacity of the maintenance cartridge usage may be displayed at a different point in time. Canon recommends that you use the information and massage displayed on the operation panel of the printer as your reference.
 - All prices above are inclusive of all taxes.

Copyright © 2021 Canon India Pvt Ltd. All rights reserved.